

PLUG&PLAY



MOTORE TUBOLARE CON REGOLAZIONE AUTOMATICA
DEL FINECORSA EL ETTRONICO

IT

TUBULAR MOTOR WITH AUTOMATIC ADJUSTMENT
OF THE ELECTRONIC LIMIT SWITCH

EN

ROHRMOTOR MIT AUTOMATISCHER EINSTELLUNG DER EI EKTRONISCHEN ENDI AGEN

DE

MOTEUR TUBULAIRE AVEC RÉGLAGE AUTOMATIQUE DES FINS DE COURSE ÉLECTRONIQUES

FR

MOTOR TUBULAR CON REGULACIÓN AUTOMÁTICA
DEL FIN DE CARRERA ELECTRONICO

ES

Table of contents:

Electrical connections	p. 1
How to prepare the motor	p. 12
Instruction for use	p. 13
Key to symbols Command sequences example	
Changing limit switches Deleting of single limit switch positions Deleting of all limit switch positions	p. 15
Motor operation	p. 16
Restoring the original configuration	n 16

EU DECLARATION OF CONFORMITY



CHERUBINI S.p.A. declares that the product is in conformity with the relevant Union harmonisation legislation:

Directive 2014/35/EU


Directive 2014/30/EU


Directive 2011/65/EU


The full text of the EU declaration of conformity is available upon request at the following website: www.cherubini.it.

ELECTRICAL CONNECTIONS


- To prevent any danger or malfunction, the size of electrical control components connected to the motor must be compatible with the electrical features of the motor.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the national installation standards.
- For outdoor use, provide the appliance with a supply cord with designation H05RN-F containing at least 2% of carbon.
- Cable length between motor and control-switch maximal 50 m.
 In case of cable length more than 50 m an interface-relay have to be used.

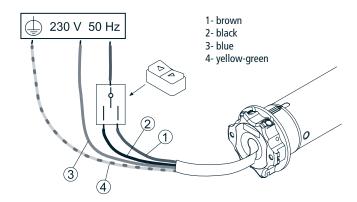

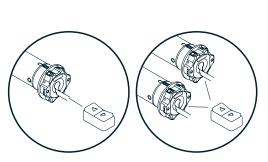



HOW TO PREPARE THE MOTOR

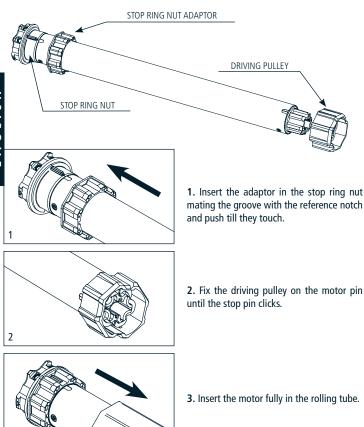

NB: If you use tubes with a round form, the driving pulley must be fixed to the tube, and the installation is to be paid by the person who installs the system. For other tube sections the fitting is optional, but strongly recommended.


INSTRUCTION FOR USE

The tubular motor is very simple to be used and installed, it does not need any regulation as it automatically detects the position of limit switch.

The rolling shutter must be equipped with:

- A security locks or stiff fixing springs,
- B fixed or removable stoppers for end slats.


It is very important to check the sturdiness of the rolling shutter.

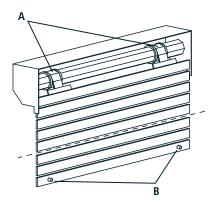

KEY TO SYMBOLS















Press the buttons as indicated in rapid sequence and hold the button down at the step marked by "HOLD", to check the motor confirmation movement

COMAND SEQUENCES EXAMPLE

Most of the command sequences have three or six distinct steps.

The buttons should be pressed quickly (<0.5 sec) as indicated in the sequence.

The time interval between each step should not be more than 1 second, otherwise the command sequence will be cancelled.

To receive confirmation that the sequence has been accepted by the motor, the button must be held down at the final step marked by HOLD.

Command sequence example in 6 steps:



Attention! If the sequence requires a repetition of the same commands (Up+Up/Down+Down), an interposition of the Stop position could be necessary depending on the type of switch in use.

CHANGING LIMIT SWITCHES

The following command sequences may be performed only after the limit switches have been learned and only when the motor is completely on one of the two limit switch positions: either lower or upper limit positions.

DELETING OF SINGLE LIMIT SWITCH POSITIONS

Deleting the UPPER limit starting from the UPPER limit switch position



Deleting the LOWER limit starting from the LOWER limit switch position




DELETING OF ALL LIMIT SWITCH POSITIONS

Deleting both limit switch position starting from the UPPER limit



Deleting both limit switch position starting from the LOWER limit



MOTOR OPERATION

	STOP AT LIMIT SWITCH (OPENING AND CLOSING)	OBSTACLE DETECTION DURING MOVEMENT
Plug&Play	Normally it stops few mm before touching the stop. It moves periodically to the end stop and performs a slight backreverse movement to relieve the load.	It stops and slightly reverses itself to decrease the force.


When an obstacle is detected in one direction, the movement is inhibited in that direction. Please operate the motor in the opposite direction to restore normal operation.

RESTORING THE ORIGINAL CONFIGURATION

PLEASE NOTE: recovery of the default configuration will delete the limit switches.

To restore the original motor configuration perform the procedure as described below:

- Connect both the brown and black motor wires under the same switch, e.g. UP.

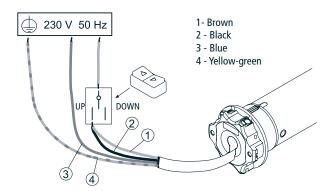

- Press the UP button for at least 2 seconds.
- Disconnect and then restore the original control switch electrical connections (see page 11).

Note - Bem - Notes - Notas:

•••••	 	 	
• • • • • • • • • • • • • • • • • • • •	 	 	
• • • • • • • • • • • • • • • • • • • •	 	 	 ······
• • • • • • • • • • • • • • • • • • • •	 	 	
• • • • • • • • • • • • • • • • • • • •	 	 	 .
• • • • • • • • • • • • • • • • • • • •	 	 	 .
• • • • • • • • • • • • • • • • • • • •	 	 	 .
•••••	 	 	
•••••	 	 	
•••••	 	 	
•••••	 	 	
•••••	 	 	
• • • • • • • • • • • • • • • • • • • •	 	 	
	 	 	 <u>.</u>

CHERUBINI S.p.A.

Via Adige 55 * 25081 Bedizzole [BS] - Italy Tel. +39 030 6872.039 | Fax +39 030 6872.040 info@cherubini.it | www.cherubini.it

CHERUBINI Iberia S.L.

Avda. Unión Europea 11-H Apdo. 283 - P. I. El Castillo 03630 Sax Alicante - Spain Tel. +34 (0) 966 967 504 | Fax +34 (0) 966 967 505 info@cherubini.es | www.cherubini.es

CHERUBINI France S.a.r.l.

ZI Du Mas Barbet 145 Impasse Ampère 30600 Vauvert - France TéL +33 (0) 466 77 92 32 info@cherubini.fr | www.cherubini.fr

CHERUBINI Deutschland GmbH

Siemensstrasse, 40 - 53121 Bonn - Deutschland Tel. +49 (0) 228 962 976 34 / 35 | Fax +49 (0) 228 962 976 36 info@cherubini-group.de | www.cherubini-group.de

